

---

## 11 Disassembly and Reassembly

---

This section of the service manual describes the disassembly and reassembly procedures for the BI17DS/BI19DS TFT-LCD monitors.

⚠ **WARNING:** This monitor contains electrostatically sensitive devices. Use caution when handling these components.


### 11-1 Disassembly

---

⚠ **Cautions:** 1. Disconnect the monitor from the power source before disassembly.




1. Remove 5 screws and remove stand.

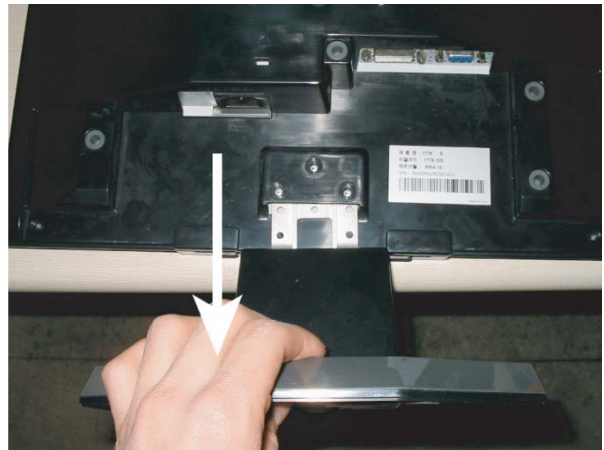

2. Remove 1 screw and lift up the rear cover.




## 11 Disassembly and Reassembly

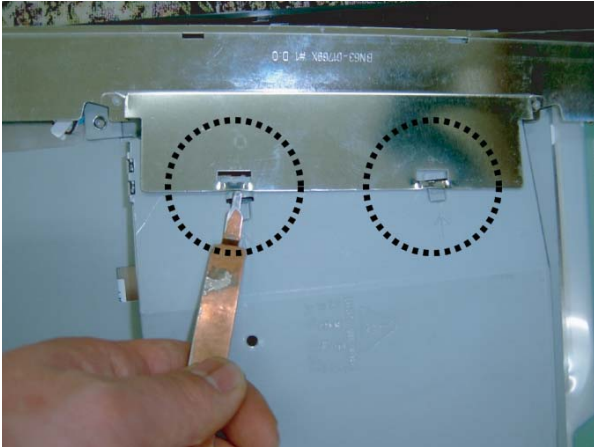

3. Use the jig to remove the shield lamp.

**Note:** Be careful not to hurt your fingers when you remove the lamp.

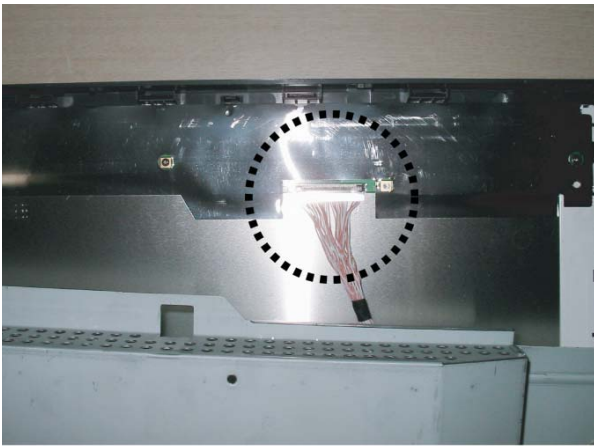

4. Place the ass'y on the one hand and remove the LVDS cable by the other hand. Then, loosen the 4 screws.



5. Remove screw, and separate Main PBA.



6. Lift up the Panel.



## 11-2 Reassembly

---

Reassembly procedures are in the reverse order of disassembly procedures.

## Memo